

KICKR CORE 2

The Wahoo KICKR CORE 2 is a highly capable smart indoor bike trainer engineered to deliver a realistic, accurate, and quiet riding experience. It features proven flywheel technology combined with advanced algorithms to provide an ultra-smooth, outdoor-like road feel. With a maximum power output of 1,800 watts and the ability to simulate challenging inclines up to 16%, it handles the demands of intense indoor workouts with ease. The trainer ensures reliable, continuous power accuracy within $\pm 2\%$ to keep your training data perfectly dialed. Connecting seamlessly to your favorite platforms via built-in WiFi, Bluetooth, and ANT+, the upgraded system now features KICKR Bridge for direct heart rate streaming and an ultra-responsive Race Mode, providing lightning-fast resistance changes.

SIMULATES INCLINES
UP TO +16% GRADE

RACE MODE FOR ULTRA-
FAST DATA RESPONSE

1,800 WATTS MAXIMUM
POWER OUTPUT

VIRTUALLY SILENT BELT
DRIVETRAIN SYSTEM

REDESIGNED LEGS FOR
ENHANCED STABILITY

PRECISION POWER
ACCURACY WITHIN $\pm 2\%$

BUILT-IN WIFI & KICKR
BRIDGE INTEGRATION

ERG EASY RAMP FOR
SEAMLESS INTERVALS



- Dimensions (Legs Open): 51 x 58 x 48 cm | Weight: 13.6 kg | Power: 100-240V, 50/60 Hz | Max Rider: 113 kg
- Package includes: KICKR CORE 2 trainer, AC power adapter, 1.8mm cassette spacer, and QR/Thru-Axle hub adapter

Technical Specifications



Power Accuracy

±2% for reliable structured testing baseline



Maximum Power Output

Up to 1800W for sprint & interval protocols



Incline Simulation

Up to 16% gradient for climbing assessments



Integrated Wi-Fi

2.4 GHz, stable transmission & OTA updates



Race Mode (10 Hz)

10× faster power data per flywheel revolution



KICKR Sensor Bridge

Routes HR & BT devices through the trainer



Redesigned Chassis

Flat-leg design, 4-bolt assembly, high stability



Multi-Color Diagnostic LEDs

Visual status for Wi-Fi, BT & firmware updates



Electromagnetic Resistance

Quiet brake + flywheel, smooth inertial carryover



Broad Frame Compatibility

QR 130/135mm & Thru-Axle 12×142/148mm



Virtual Shifting

8–13 speed cassette or Zwift Cog & Click ready



Ecosystem Expansion

Compatible with KICKR CLIMB & HEADWIND fan



We are a complete solution provider for all your Sport Science, Biomechanics, SnC, Physiology, Data Management, Data Analysis, & High Performance Management needs.
We are your partners in excellence!

Get in Touch...!

**MEDEVICE
HEALTHTECH**

TRUST | TECHNOLOGY | INNOVATION

✉ sales@medevice.co


☎ +91 94056 60000 / +91 75881 34567

📍 Pune

Scan for More Products & Videos



medevice.co

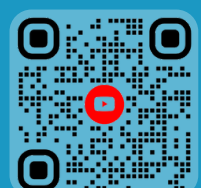

Kickr Core 2
Video



// MedeviceHealthtech