

KICKR MOVE

The Wahoo KICKR MOVE is a revolutionary smart indoor bike trainer designed to deliver an entirely new dimension of ride feel. It features an integrated dual-axis track system that provides up to 8 inches of fore-aft travel, combined with customizable KICKR AXIS feet for natural side-to-side motion. This unparalleled freedom mirrors the exact sensation of riding outdoors, bringing next-level comfort and reducing fatigue during long sessions. With a massive maximum power output of 2,200 watts and the ability to simulate steep inclines up to 20%, it easily stands up to the demands of the world's most powerful cyclists. The trainer utilizes automatic calibration to ensure continuous power accuracy within $\pm 1\%$. Connecting seamlessly to your favorite training platforms via WiFi, Bluetooth, and Direct Connect, the virtually silent system offers a professional-grade indoor cycling experience.

SIMULATES INCLINES
UP TO +20% GRADE

2,200 WATTS MAXIMUM
POWER OUTPUT

AUTO-CALIBRATION FOR
CONTINUOUS PRECISION

DIRECT CONNECT & BUILT-
IN WIFI CONNECTIVITY

BUILT-IN 8-INCH FORE-
AFT TRACK MOTION

VIRTUALLY SILENT BELT
DRIVETRAIN SYSTEM

PRECISION POWER
ACCURACY WITHIN $\pm 1\%$

ERG EASY RAMP FOR
SEAMLESS INTERVALS



- Dimensions: Footprint 68 x 93 cm | Weight: 29 kg | Power: 100-240V, 50/60 Hz | Max Rider: 113 kg
- Package includes: KICKR MOVE trainer, AC power adapter, KICKR AXIS feet, quick-release skewer, pre-installed 11-speed cassette, and QR/Thru-Axle hub adapters

Technical Specifications



Fore-Aft Motion

8 in (20 cm) track travel
reduces saddle fatigue



Dual-Axis Biomechanics

Fore-aft + lateral sway for
real riding feel



Mechanical Lockout

Physical switch locks track
for static testing



Power Accuracy

±1% via electromagnetic
resistance unit



Maximum Power Ceiling

2200W at 40 kph for sprint
testing



Continuous Auto-Calibration

Auto spindown during
coasting, no manual offset



High-Incline Simulation

Up to 20% gradient
climbing simulation



Flywheel Inertia

16 lb (7.25 kg) for realistic
road momentum



Wi-Fi & Direct Connect

2.4 GHz Wi-Fi + wired LAN
port



ERG Mode Easy Ramp

10s gradual reapply
prevents dead-stops



Accessory Integration

KICKR CLIMB compatible
via base adapter



Drivetrain Compatibility

QR & Thru-Axle, 8-12
speed Shimano/SRAM



We are a complete solution provider for all your Sport Science, Biomechanics, SnC, Physiology, Data Management, Data Analysis, & High Performance Management needs.
We are your partners in excellence!

Get in Touch...!

**MEDEVICE
HEALTHTECH**

TRUST | TECHNOLOGY | INNOVATION

✉ sales@medevice.co


☎ +91 94056 60000 / +91 75881 34567

📍 Pune

Scan for More Products & Videos



medevice.co

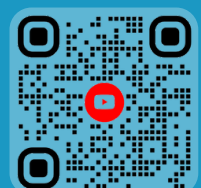

Kickr Move
Video



// MedeviceHealthtech